RS-232C Port Specifications

■ PC control of the TV

 Attach an RS-232C cable cross-type (commercially available) to the supplied Din/D-Sub RS-232C for the connections.

NOTE

 This operation system should be used by a person who is accustomed to using computers.

■ Communication conditions

Set the RS-232C communication settings on the PC to match the TV's communication conditions.

The TV's communication settings are as follows:

Baud rate:	9,600 bps
Data length:	8 bits
Parity bit:	None
Stop bit:	1 bit
Flow control:	None

■ Communication procedure

Send the control commands from the PC via the RS-232C connector.

The TV operates according to the received command and sends a response message to the PC. Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

Command format

Eight ASCII codes + CR



Command 4-digits

Parameter 4-digits

s Return code

Command 4-digits: Command. The text of four characters. Parameter 4-digits: Parameter 0–9, x, blank, ?

■ Parameter


Input the parameter values, aligning left, and fill with blank(s) for the remainder. (Be sure that 4 values are input for the parameter.)

When the input parameter is not within an adjustable range, "ERR" returns. (Refer to "Response code format".) Any numerical value can replace the "x" on the table.



When "?" is input for some commands, the present setting value responds.

■ Response code format

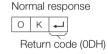

Problem response (communication error or incorrect command)



■ Command table

• Commands not indicated here are not guaranteed to operate.

				0	
CONTROL ITEM C		COMMAND	PARAMETER		CONTROL CONTENTS
POWER ON COMMAI	ND SETTING	RSPW	0	Off	The Power On command rejected.
			1 _ _	On	The Power On command accepted.
POWER SETTING		POWR	0	Power Off	It shifts to standby.
			1	Power On	Power On
INPUT SELECTION A TOGGLE		I T G D	x	(Toggle)	It input-switches by the toggle. (It is the same as an input change key)
	TV	I T V D	0		It input-switches to TV. (A channel remains as it is. (Last memory))
l li	INPUT1-8	I A V D	*	Input terminal number (1–8)	It input-switches to INPUT1~INPUT8.
INPUT SELECTION B INF	INPUT 1	INP1	*	0: Auto, 1: VIDEO, 2: COMPONENT	An input change is also included.
	INPUT 2	INP2	*	0: Auto, 2: COMPONENT, 3: S-TERMINAL	
AV MODE SELECTION	N	A V M D	*	0: (Toggle), 1: STANDARD, 2: MOVIE, 3: GAME, 4: USER, 5: DYNAMIC (Fixed), 6: DYNAMIC, 7: PC, 100: INTELLIGENT	Although it can choose now, it is toggle operation in inside.
VOLUME		V O L M	* *	Volume (0-60)	
\	H-POSITION	H P O S			The screen position variable ranges depend on the View Mode or the
	V-POSITION	V P O S			signal type. The ranges can be seen on the position-setting screen.
	CLOCK	CLCK	* * *	Only PC mode. (0-180)	
	PHASE	P H S E	* * *	Only PC mode. (0-40)	
VIEW MODE		W I D E		0: (Toggle) [AV], 1: Side Bar [AV], 2: S.Stretch [AV] 3: Zoom [AV], 4: Stretch [AV], 5: Normal [PC] 6: Zoom [PC], 7: Stretch [PC], 8: Dot by Dot [PC] [AV], 9: Full Screen [AV]	O: Although it can choose now, it is toggle operation in inside. 1: Only available when 4:3 signal is being input. 5, 6: Only available when 4:3 signal is being input. 8: [PC] Available except when UXGA is being input. [AV] Only available when 1080i/p is being input. 9: Only available when 720p is being input.
MUTE		M U T E	*	0: (Toggle), 1: On, 2: Off	
SURROUND A C S		A C S U	*	0: (Toggle), 1: On, 2: Off	
AUDIO SELECTION A C H A		x	(Toggle)		
SLEEP TIMER		O F T M	- - -	0: Off, 1: OFF TIMER – 30 MIN., 2: OFF TIMER – 60 MIN., 3: OFF TIMER – 90 MIN., 4: OFF TIMER – 120 MIN.	
	DIRECT CHANNEL (ANALOG)	D C C H		The channel number of TV (1–135)	An input change is included if it is not TV display. In Air, 2-69ch is effective. In Cable, 1-135ch is effective.
	DIRECT	D A 2 P		(0100-9999)	DIGITAL Air (Two-Part numbers, 2-digit plus 2-digit)
	CHANNEL	D C 2 U	* * * -	(1-999)	DIGITAL Cable (Two-Part numbers, 3-digit plus 3-digit)
	(DIGITAL)				Front half of DIGITAL CABLE CHANNEL NO. (Designate major channel)
		D C 2 L	* * * -	(0-999)	DIGITAL Cable (Two-Part numbers, 3-digit plus 3-digit)
					Rear half of DIGITAL CABLE CHANNEL NO. (Designate minor channel)
		D C 1 0		(0-9999)	DIGITAL Cable (One-Part numbers, 5-digit, less than 10,000)
		D C 1 1	* * * *	(0-6383)	DIGITAL Cable (One-Part numbers, 5-digit, more than 10,000)
	CH UP	C H U P		The channel number of TV +1	If it is not TV display, it will input-switch to TV. (same function as CH∧)
	CH DOWN	CHDW		The channel number of TV -1	If it is not TV display, it will input-switch to TV. (same function as CHV)
CC		CLCP	x	(Toggle)	Toggle operation of a closed caption.

NOTE

- If an underbar (_) appears in the parameter column, enter a space.
- If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.
- Any numerical value can replace the "x" on the table.